

C & K 238I & 2316 command summary

Default installer code is 012345 * 0 #

Installer code + shift 0 = program mode

Shift = *

Shift + enter = exits program mode

Enter = #

Delete a user M/code + shift + 0 + enter + user number

{2—8} + enter + user number {2—8} + enter

Change user pin number

M/code + * + 0 + # + add new number # + new number again #

If accepted the keypad will beep twice

N.B. 1st digit must be the same as the user number

e.g. user 2 = 2123 / user 5 = 5123 etc.

User 8 = guest combination

Function	Comments	Key sequence
System trouble / view trouble		Press #
Clear alarm memory and resets watchdog led		Shift 1 enter
Toggles keypad lockout on / off		Code shift 2 enter
Bypass zones		Code + bypass + zone number + # Use bypass key instead of # if more than One zone is to be bypassed .
Group bypass for home mode		Code shift 4 enter
Toggles chime globally		Shift 5 enter
Instant home arming		Code shift 7 4 enter Or 4 7
Arm in instant mode		Code shift 7 enter
Toggle back light on / off		Shift 8 enter
Display keypad revision number		Shift 9 enter
Initiates RPS callback		Shift 02 enter
English text display		Shift 31 enter
Italian text display		Shift 32 enter
Spanish text display		Shift 33 enter
French text display		Shift 34 enter
French Canadian text display		Shift 35 enter
Cancels audible feedback		Shift 51 enter
Cancel entry / exit beeps		Shift 52 enter
Toggle chime {for that keypad}		Shift 53 enter
Turns off error warning tones { for that keypad}		Shift 54 enter
Enter walk test mode		Code Shift 60 enter
Exit walk test mode		Hit any key
Initiates dialer test		Code Shift 61 enter
1 } Disrupts auxiliary power {for five seconds} 2 } Resets smoke detectors		Shift 62 enter
Sound sirens for 3sec's		Code Shift 63 enter
Performs two minute dynamic battery test		Shift 64 enter
Reset panel		Master code Shift 68 enter
Kill / revive mode		Install code Shift 69 enter

Sound	Meaning
2 beeps	1} System armed or disarmed 2} Successful central station test or battery test
5 beeps	1} Wrong Pin number entered 2} Invalid function 3} Unauthorized command attempted 4} Error changing pin number
Continuous tone, beeping fast for last ten seconds	Entry delay time
Continuous beeping, speeding up for last ten seconds	Exit delay
2 second beep	1} Door chime 2} Ring back after closing 3} Zone faulted during walk test
Chirping { 1 second on, 4 seconds off	1} Chip alert warning , system is armed, but delay Zone is faulted : you must disarm the system Before exit delay expires 2} Alarm signal for zone programming for chirping bell or siren
Continuous tone	1} Alarm signal for zone programmed for steady bell or siren 2} Circuit malfunction {trouble on supervised loops only }
Pulsed tone { 2 seconds on/off	Alarm signal for zone programmed for pulsed bell or siren

	ON	OFF	FLASHING
POWER	AC power is being supplied	AC power failure System using battery	Battery is low
ARM	System is armed	System in disarm	System is armed with Delay zone turned to instant zones
READY	System is normal	System is armed Zone is faulted Zone trouble	Zone is Bypassed Zone is / was in alarm
BYPASS	One or more Zones --Bypassed	No Zones Bypassed	
PROGRAM	System in program mode	Normal state	
TROUBLE	System trouble Zone trouble	No trouble	Automatic system reset
ZONES	Zone is faulted while -- System is disarmed	Normal state zone is not faulted	Flashing slow:- Zone is Bypassed Zone is in trouble Flashing Fast:- Zone is / was in Alarm